

INSTALLATION INSTRUCTIONS

DESCRIPTION: Interior Light Kit

PART NUMBER: B4J-H54C0-V0

MODEL: 2021+ Wolverine RMax4, RMax2, X4 and X2



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

NOTICE:

You'll be connecting this kit to the wiring harness and will need to know how to access the area behind the inner firewall. Refer to the service manual for the vehicle. Installation of this kit should be performed by an authorized Yamaha dealer or a qualified mechanic.

WARRANTY INFORMATION:

In the United States, see your Yamaha dealer for a copy of the Yamaha Genuine Parts and Accessories Limited Warranty.


DEALER OR INSTALLER:

These instructions contain important information for future reference and *must* be given to the customer.

PARTS LIST:

| No. | Part Number | Description | Qty |
|-----|---------------------|--------------------------|-----|
| -- | B4J-H54C0-V0 | Interior Light Kit | -- |
| ① | B4J-H5460-00 | Auxiliary Light Assembly | 3 |

* Part supplied with kit only and not available separately.

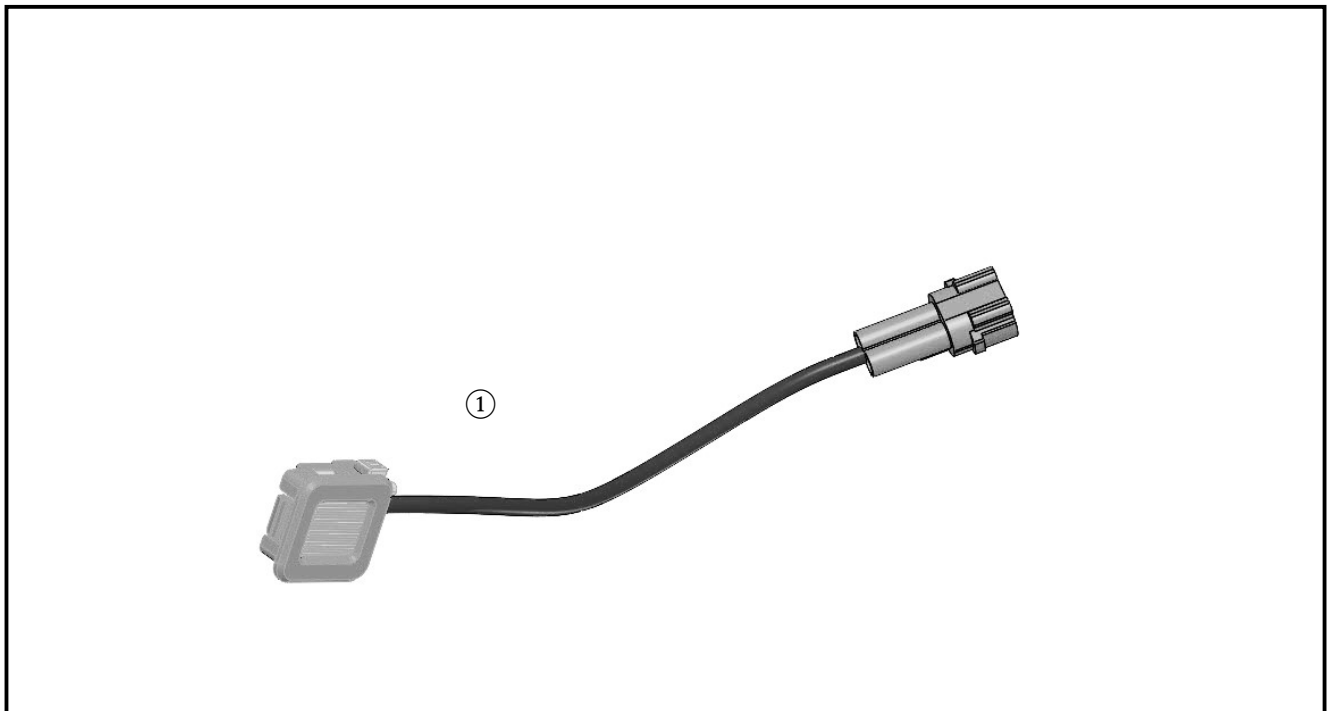

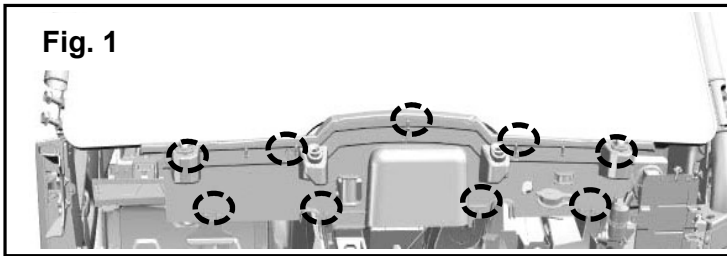


Fig. 1

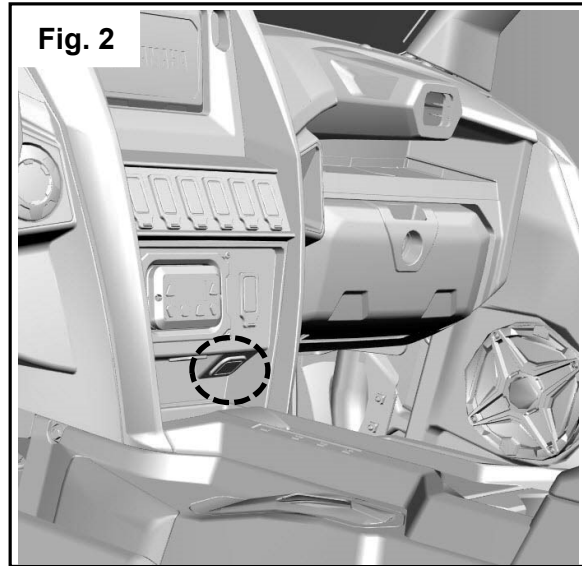


Fig. 2

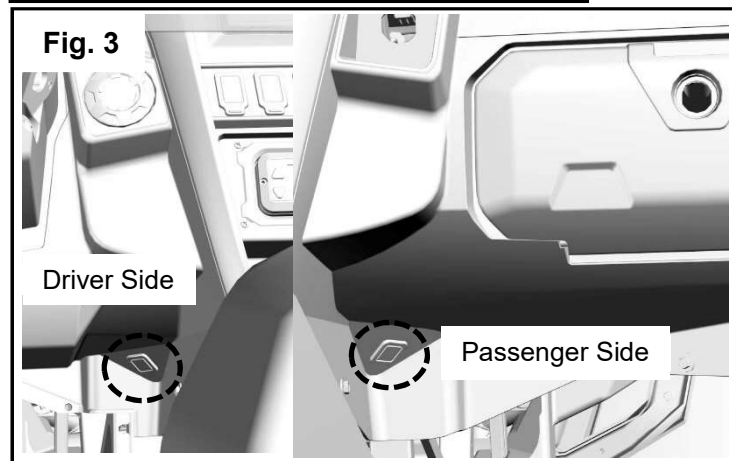


Fig. 3

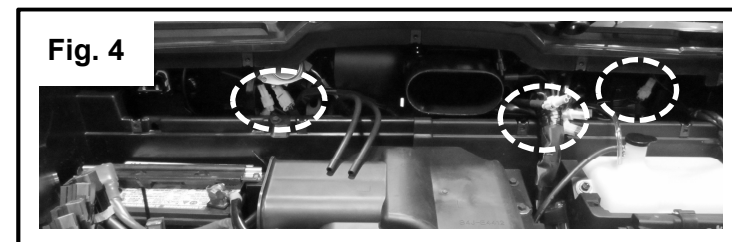


Fig. 4

PREPARATION:

- Place the vehicle on a secure and level surface.
- Set the parking brake.
- Clean the mounting surfaces before beginning installation.

INSTALLATION:

1. Remove the hood and access the inner firewall. Remove the nine bolts that hold the firewall to the hood section. Disconnect the speed key wire harness (if equipped). Retain the stock bolts for reuse. (Fig. 1)
2. Remove the center dash bezel. (Fig. 2)
3. Remove the covers in the driver and passenger foot wells and the center dash. (Fig. 2 and 3)
4. Insert the wire harness end of the ① Auxiliary Light Assembly and snap the light in each of the three places.
5. Route all the wires to the inner fire wall area and connect to the power connections.
Note: The power connections have white connectors and blue tape. One on the left side, one in the middle and one on the right side. Remove and discard the protective caps. (Fig. 4)
6. Snap the center bezel back in place.
7. Reconnect the speed key and insert the wires back in place.
8. Check operation of the interior lights before reassembling the inner firewall. They will stay on if the key is in the ON position.
9. Reinstall the inner firewall with the stock bolts and torque to 3Nm (0.3 m-kg or 2.2 lb-ft)
10. Reinstall the hood.

MAINTENANCE:

Periodically, check torque on all hardware. If loose hardware is found, re-torque to specification.

CARE AND CLEANING:

Clean painted metal parts with a clean soft cloth and mild soap and water solution. Rinse and dry.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.5 HRS.