

INSTALLATION INSTRUCTIONS

DESCRIPTION: Comfort Seat
 PART NUMBER: B4C-F47C0-V0
 MODEL: '18 ~ MT-07



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury to yourself, or damage to the accessory or vehicle.

DEALER OR INSTALLER:

These instructions contain important information for future reference and *must* be given to the customer.


WARRANTY INFORMATION:

In the U.S., see your Yamaha dealer for a copy of the Genuine Yamaha Parts and Accessories Limited Warranty Statement.

NOTICE:


This installation requires a torque wrench and should be performed by an authorized Yamaha dealer or other qualified technician.

PARTS LIST:

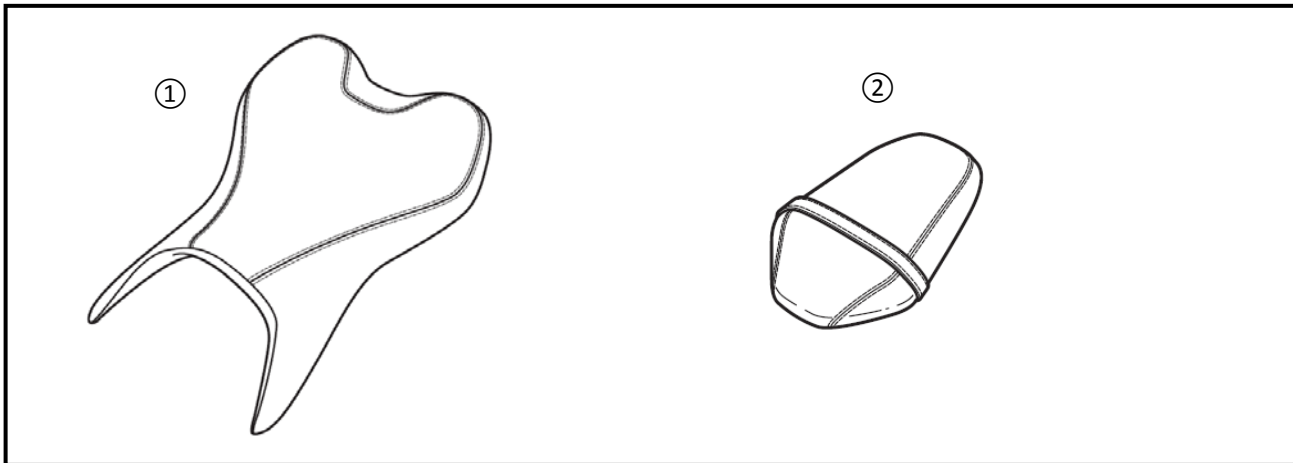

No.	Part Number	Description	Qty
--	B4C-F47C0-V0	Comfort Seat	--
①	*	Rider Seat	1
②	*	Passenger Seat	1

* Part supplied with kit only and not available separately.

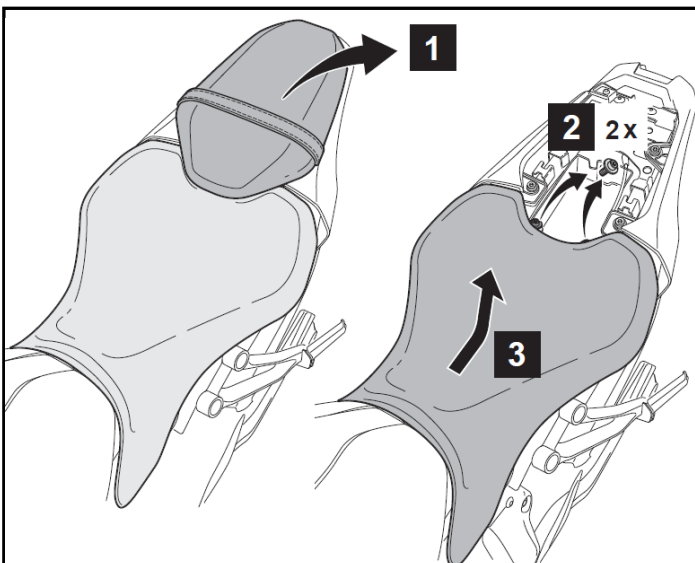


PREPARATION:

- Stand motorcycle on a secure and level surface.
- Clean all mounting surfaces before beginning installation.

INSTALLATION:

- 1** Remove the passenger seat. It is not reused in this installation.
- 2** Remove the two stock screws that secure the rider seat and retain them for reuse.
- 3** Slide the rider's seat back and then up to remove it. It is not reused in this installation.

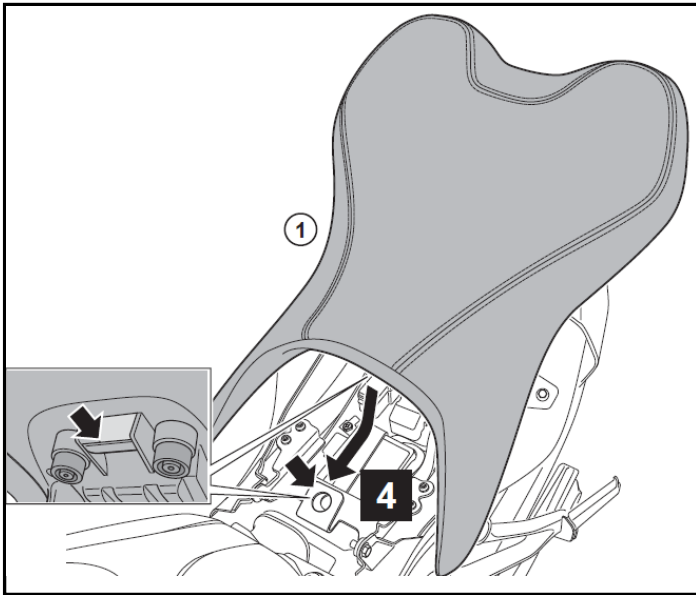

4 Install the rider ① Comfort Seat. Fit the slot in the seat onto the projection on the frame cross member as shown, and then place the seat in the original position.

5 Install and tighten the retaining bolts. Torque bolts to 8Nm (5.9 ft-lbf).

6 Install the ② Passenger Seat and press down to click and close the rear seat lock.

MAINTENANCE:

Periodically check retaining bolts on Comfort Seat for tightness and re-adjust as required. Check that Passenger Seat is securely in place.

CARE AND CLEANING:

Wash using a mild soap and water solution and soft cloth.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.1 HRS.

