

INSTALLATION INSTRUCTIONS

DESCRIPTION: Sport Screen Kit

PART # B4C-F83J0-V0

MODEL: '18~MT-07



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury to yourself, or damage to the accessory or vehicle.

NOTICE:

This installation requires a torque wrench.


WARRANTY INFORMATION:

In the United States, see your Yamaha dealer for a copy of the Genuine Yamaha Accessories Limited Warranty Statement.

DEALER:


Please give a copy of these instructions to your customer as they contain important information for future reference.

PARTS LIST:

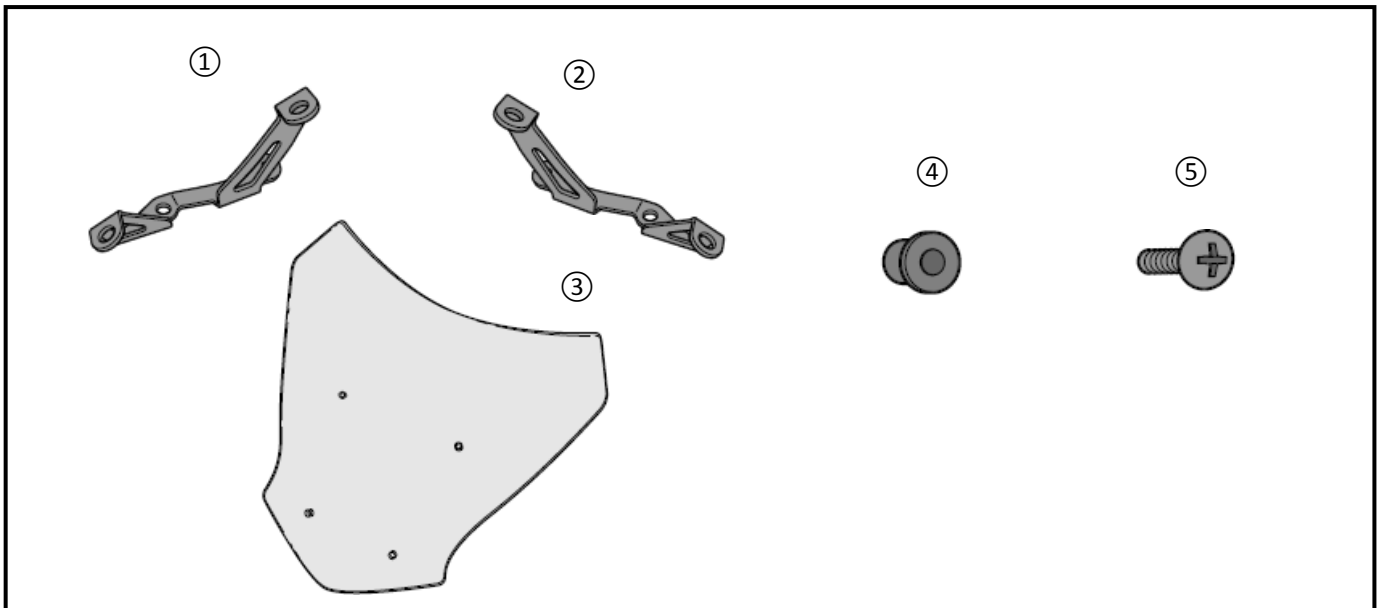

No.	Part Number	Description	Qty
--	B4C-F83J0-V0	Sport Screen Kit	--
①	*	Right Side Frame	1
②	*	Left Side Frame	1
③	*	Cowl	1
④	*	Well Nut	4
⑤	*	Screw	4

* Part supplied with kit only and not available separately.

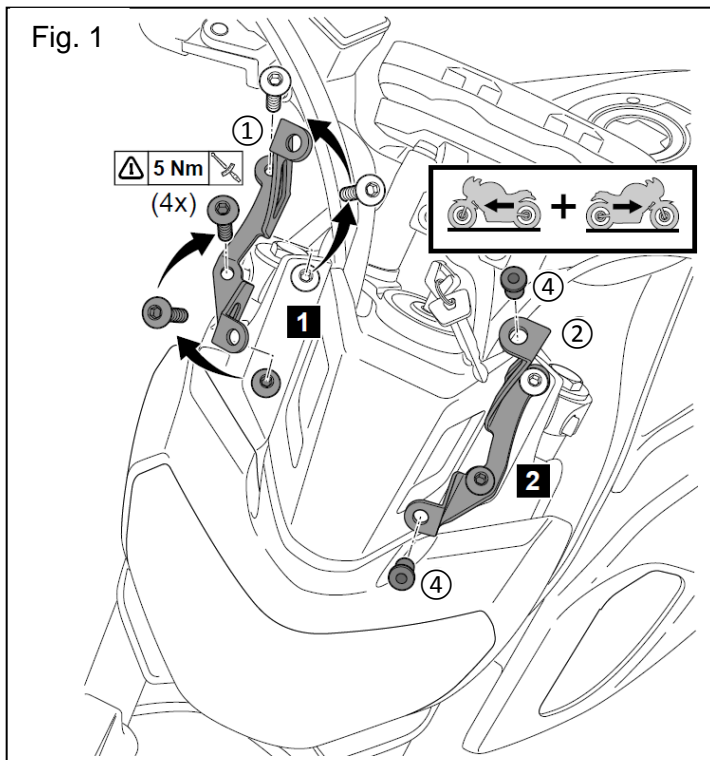

PREPARATION:


- Stand motorcycle on a secure and level surface.
- Clean all mounting surfaces before beginning installation.

INSTALLATION:

1. Remove four OE bolts as shown in Fig.1. Retain for reuse.
2. Use the four OE bolts to mount the ① Right and ② Left Side Frames. Torque these bolts to 5Nm (0.5m – kgf, 3.7 lb-ft). See Fig. 1.
3. Press the four ④ well nuts into the mount holes as shown in Fig.1.
4. Install the ③ cowl to the mounts using the four screws ⑤ as shown in Fig. 2.
5. Adjust the cowl mount position so that the cowl is not rubbing against the body or cables. Torque the ⑤ Screws to 1.0 Nm (0.1 m-kgf, 0.7 lb-ft).

MAINTENANCE:

Periodically check the tightness of all hardware and retighten as necessary.

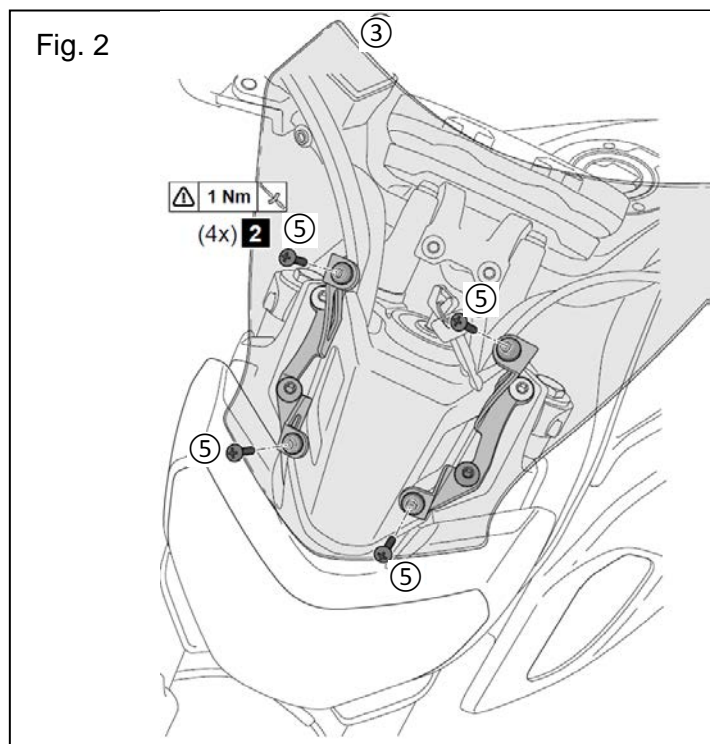

CARE AND CLEANING:

Wash using a mild soap and water solution and soft cloth. Use Yamalube® Windshield & Visor Plastic Cleaner & Conditioner (p/n ACC-PLASP-OL-11) or other high-quality plastic cleaner when needed.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.2 HRS