

## INSTALLATION INSTRUCTIONS

DESCRIPTION: Fog Light Stay Engine Guard

PART NUMBER: BW3-H54A3-V0

MODEL: '21+ Ténéré 700



### **⚠ WARNING**

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

### **NOTICE:**

Installation of this kit requires a torque wrench and should be performed by an authorized Yamaha dealer or a qualified mechanic.

### **WARRANTY INFORMATION:**

In the United States, see your Yamaha dealer for a copy of the Yamaha Genuine Parts and Accessories Limited Warranty.


### **DEALER OR INSTALLER:**


These instructions contain important information for future reference and *must* be given to the customer.

### **PARTS LIST:**

No.	Part Number	Description	Qty
--	<b>BW3-H54A3-V0</b>	Fog Light Stay Engine Guard	--
①	-	Fog light bracket right	1
②	-	Fog light bracket left	1
③	-	M6x18mm Socket Head Bolt	4

\* Part supplied with kit only and not available separately.

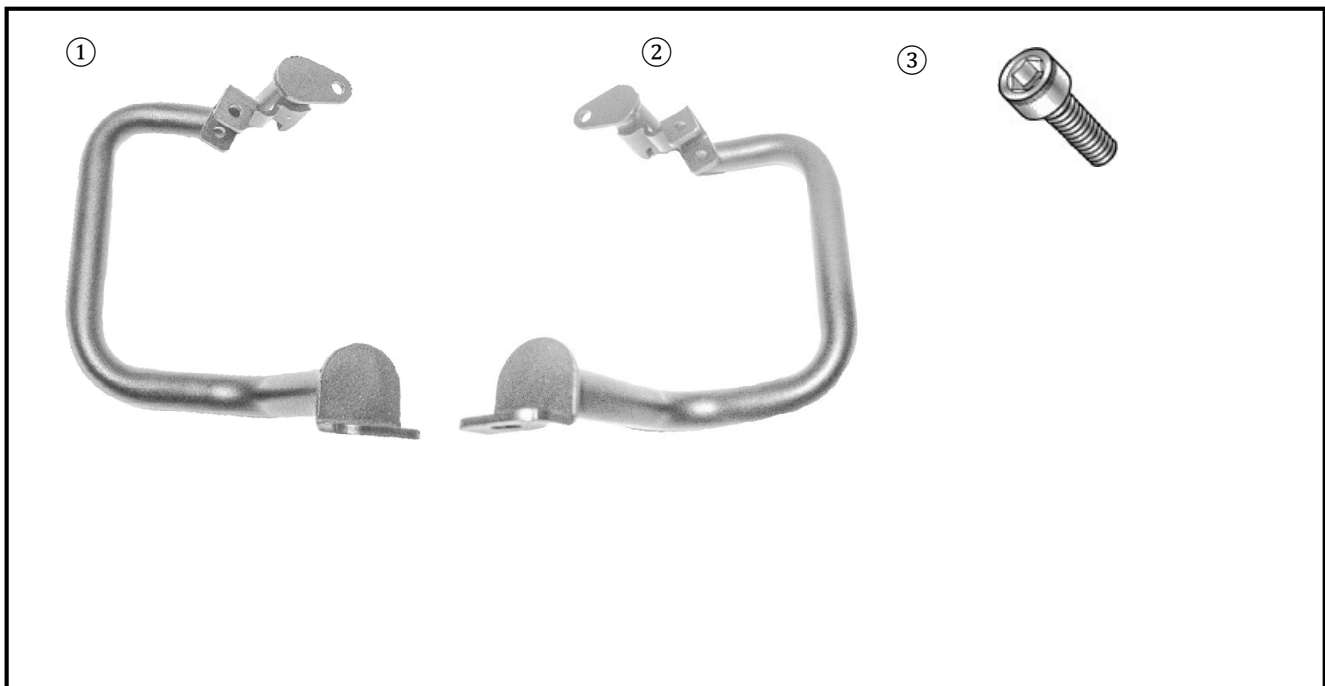

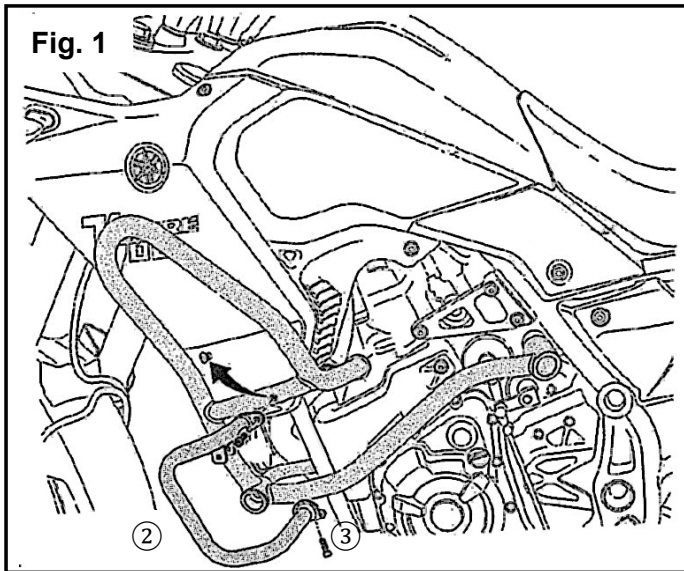

#### **PREPARATION:**

- Place the vehicle on a secure and level surface.
- Clean the mounting surfaces before beginning installation.

#### **INSTALLATION:**

1. Install the Engine Guard Kit BW3-F43B0-V0 first. Then this kit bolts on to the left and right engine guard.
2. Remove the plastic caps over the mounting holes.
3. Align the ② Fog Light Bracket Left to the left engine guard and thread in two ③ M6x18mm Socket Head Bolts into the mounting holes provided.
4. Tighten to 10Nm (1.0 kg-m or 7.3 lb-ft).
5. Repeat Step 2 and 3 for the right engine guard and attach ① Fog Light Bracket Right.

#### **MAINTENANCE:**

Periodically, check torque on all hardware. If loose hardware is found, re-torque to specification.

#### **CARE AND CLEANING:**

Clean painted metal parts with a clean soft cloth and mild soap and water solution. Rinse and dry.

#### **CUSTOMER SERVICE:**

For further information see your Yamaha dealer.

**ESTIMATED TIME TO INSTALL: 0.2 HRS.**