

INSTALLATION INSTRUCTIONS

DESCRIPTION: Tank Pad Kit
PART NUMBER: BW3-F41D0-V0
MODEL: '21+ Ténéré 700



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

NOTICE:

Installation of this kit requires a torque wrench and should be performed by an authorized Yamaha dealer or a qualified mechanic.

WARRANTY INFORMATION:

In the United States, see your Yamaha dealer for a copy of the Yamaha Genuine Parts and Accessories Limited Warranty.

DEALER OR INSTALLER:




These instructions contain important information for future reference and *must* be given to the customer.

PARTS LIST:

No.	Part Number	Description	Qty
--	BW3-F41D0-V0	Tank Pad Kit	--
①	-	Tank Pad	1

* Part supplied with kit only and not available separately.



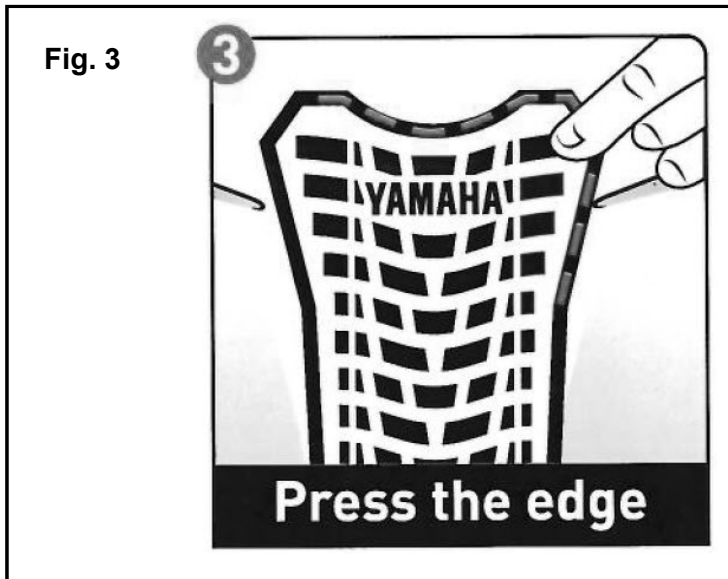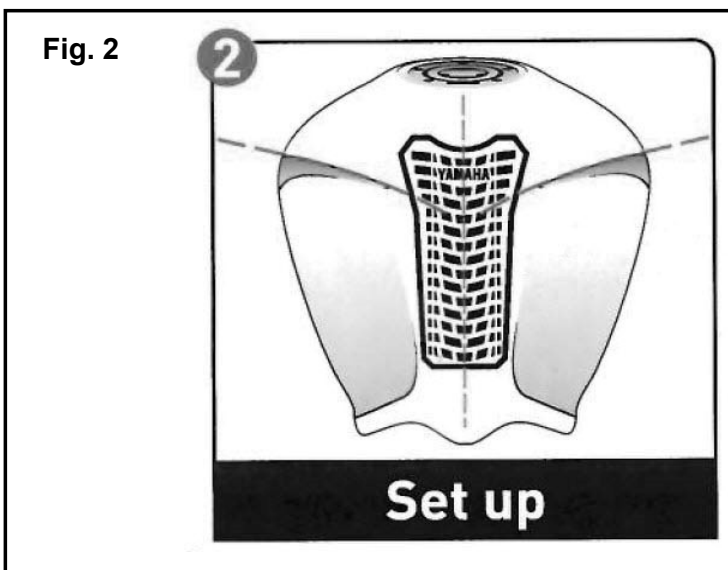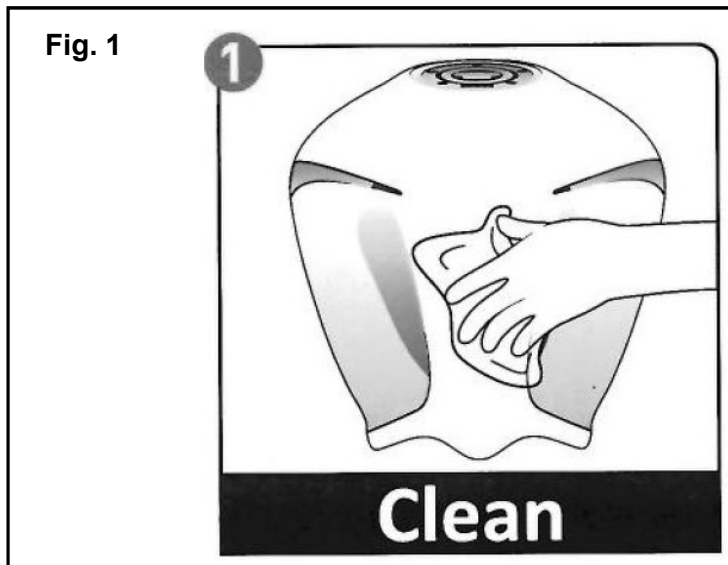

PREPARATION:

- Place the vehicle on a secure and level surface.
- Set the parking brake.
- Clean the mount surfaces before beginning installation.
- Application and storage is min. 20 degrees C or 68 degrees F

INSTALLATION:

1. Clean the area on the tank with rubbing alcohol.
2. Align the ① Tank Pad to clear the front of the seat. (Fig. 2)
3. Peel the backing and apply the ① Tank Pad to the desired location. (Fig. 2)
4. Press from the center out to the edges to clear any air bubbles. Press the edges once the center is flat.

Tip: Allow for 24 hours for the adhesive to fully cure in ambient temperatures above 70 degrees F.

MAINTENANCE:

Periodically, check the edges and make sure they are not peeling up.

CARE AND CLEANING:

Clean painted metal parts with a clean soft cloth and mild soap and water solution. Rinse and dry.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.5 HRS.