

INSTALLATION INSTRUCTIONS

DESCRIPTION: Skid Plate Kit
PART NUMBER: BW3-F84R0-V0
MODEL: '21+ Ténéré 700



WARNING

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

NOTICE:

Installation of this kit requires a torque wrench and should be performed by an authorized Yamaha dealer or a qualified mechanic.

WARRANTY INFORMATION:

In the United States, see your Yamaha dealer for a copy of the Yamaha Genuine Parts and Accessories Limited Warranty.

DEALER OR INSTALLER:

These instructions contain important information for future reference and *must* be given to the customer.

PARTS LIST:

No.	Part Number	Description	Qty
--	BW3-F84R0-V0	Skid Plate Kit	-
①	-	Skid Plate	1
②	-	Grommet	4
③	-	Grommet sleeve	4
④	-	Washer	4
⑤	-	Flanged Hex Head Bolt	4

* Part supplied with kit only and not available separately.


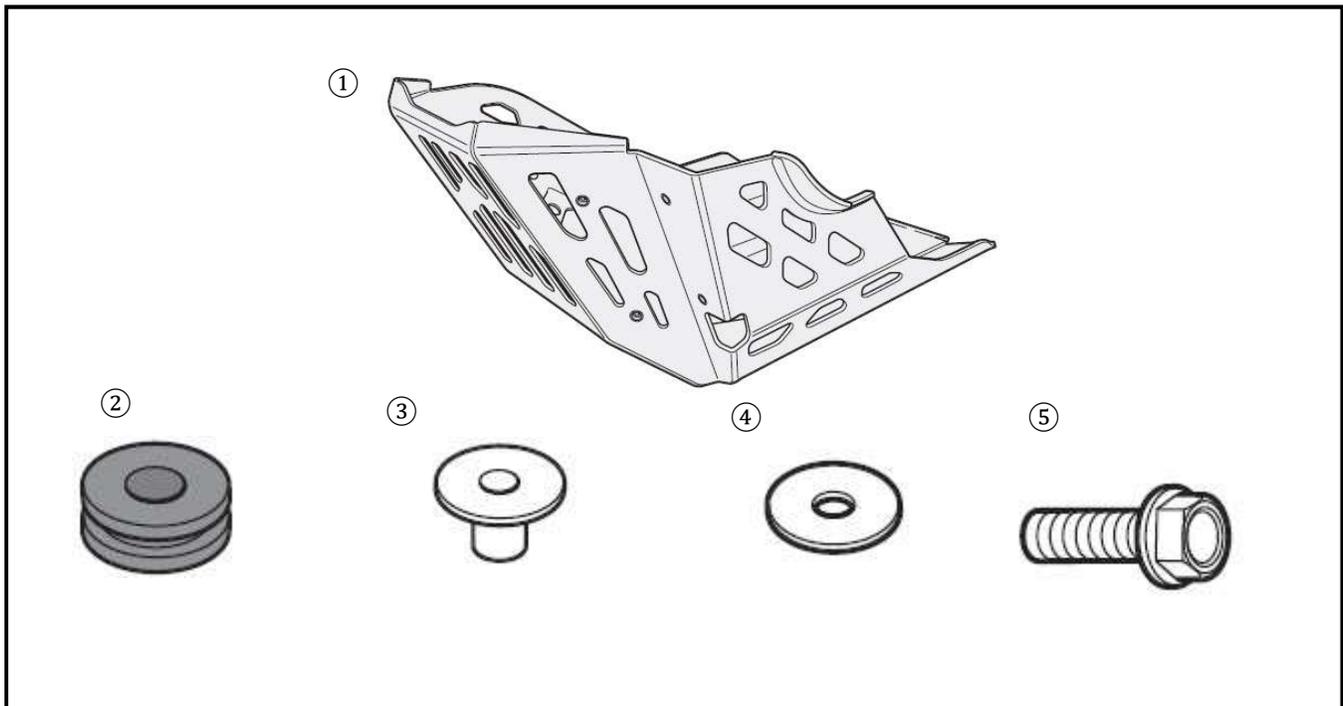


Fig. 1

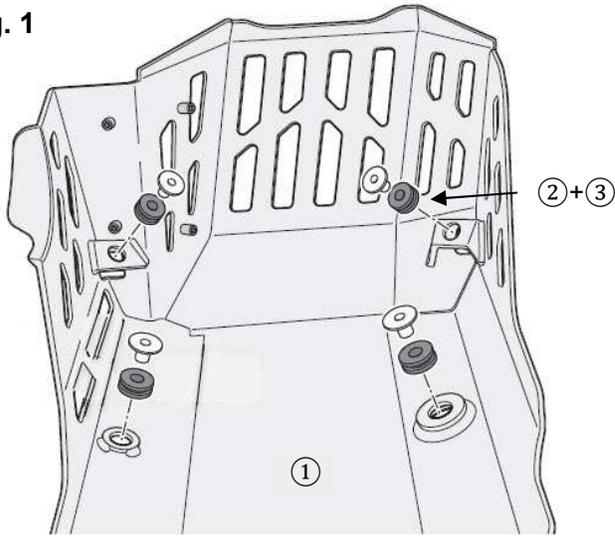


PREPARATION:

- Place the vehicle on a secure and level surface. Set the parking brake.
- Clean the mount surfaces before beginning installation.

INSTALLATION:

1. Insert (2) Grommets into the (1) Skid Plate mounting locations. (Fig. 1)
2. Press the (3) Grommet Sleeves into the (2) Grommets from Step 1.
3. Remove the stock skid plate and hardware. They will not be reused. (Fig. 2)
4. Align the (1) Skid Plate in the stock location and thread in the (5) new bolts with (4) washers. Start the rear bolts first. (Fig. 3 and 4)
5. Tighten (5) Bolts to 15 Nm (1.5 kg-m or 11 lb-ft)

Fig. 2

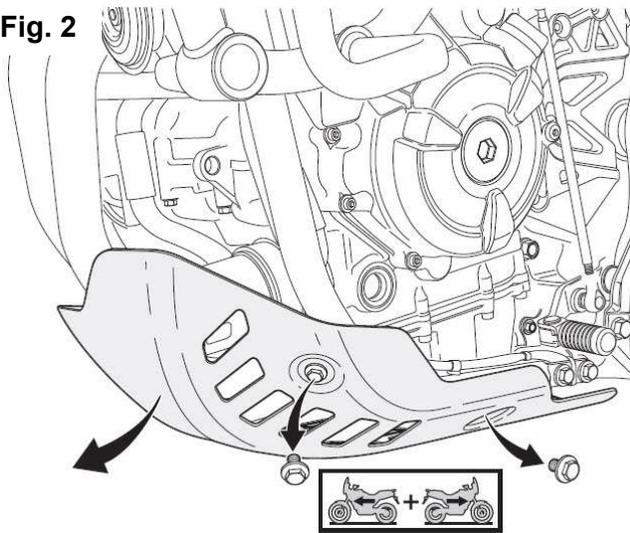

MAINTENANCE:

Periodically, check torque on all hardware. If loose hardware is found, re-torque to specification.

CARE AND CLEANING:

Clean painted metal parts with a clean soft cloth and mild soap and water solution. Rinse and dry.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.5 HRS.

Fig. 3

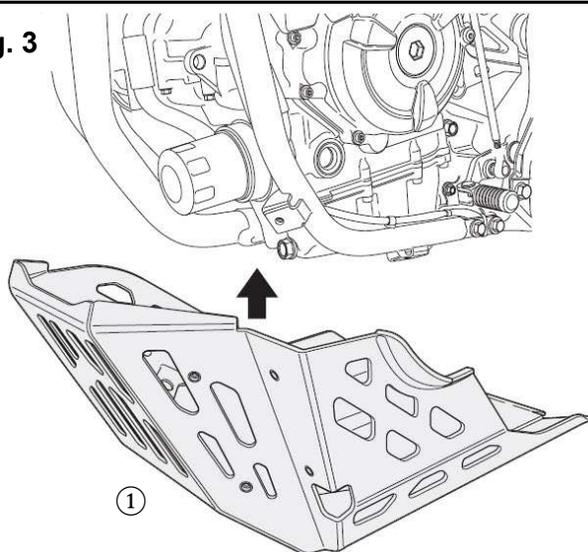


Fig. 4

