INSTALLATION INSTRUCTIONS DESCRIPTION: Chain Guide

PART NUMBER: BW3-F21G0-V0 MODEL: '21+ Ténéré 700

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

NOTICE:

Installation of this kit requires a torque wrench and should be performed by an authorized Yamaha dealer or a qualified mechanic.

WARRANTY INFORMATION:

In the United States, see your Yamaha dealer for a copy of the Yamaha Genuine Parts and Accessories Limited Warranty.


DEALER OR INSTALLER:

These instructions contain important information for future reference and *must* be given to the customer.


PARTS LIST:

No.	Part Number	Description	Qty
	BW3-F21G0-V0	Chain Guide Kit	-
1	-	Chain Guide left	1
2	-	Chain Guide right	1
3	-	Cap Washers	2
4	-	M6x20mm Hex Head Flanged Bolt	2
5	-	M6x35mm Socket Head Bolt	4
6	-	M6 Nylon Locking Nut	4

* Part supplied with kit only and not available separately.

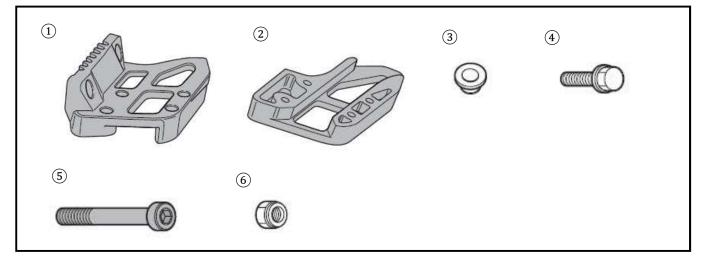



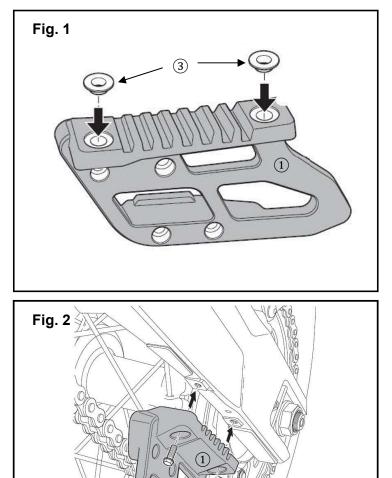

PREPARATION:

- Place the vehicle on a secure and level surface.
- Clean the mount surfaces before beginning installation.

INSTALLATION:

- 1. Insert two (3) Cap Washers into the left side of the (1)L Chain Guide.
- Align and attach the ①Chain Guide left to the underside of the left swing arm with two
 ④ M6x20mm Hex Head Flanged Bolts. Tighten to 7 Nm (0.7 kg-m or 5.1 lb-ft)
- Insert the ②Chain Guide right behind the ① Chain Guide left and over the motorcycle chain. Insert four ⑤ M6x35mm Socket Head Bolts through both parts of the chain guide and thread on four ⑥ M6 Nylon Locking Nuts.
- 4. Tighten to 7Nm (0.7 kg-m or 5.1 lb-ft)

MAINTENANCE:

Periodically, check torque on all hardware. If loose hardware is found, re-torque to specification.

CARE AND CLEANING:

Clean painted metal parts with a clean soft cloth and mild soap and water solution. Rinse and dry.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.5 HRS.

