



INSTALLATION INSTRUCTIONS
Black SE Foot Well Kit
1S3-F16G0-V0
Raptor 700

**⚠ WARNING**

Please read and understand these instructions completely before installation to avoid possible injury to yourself or damage to the accessory or vehicle.

CAUTION:

This installation should be performed by an authorized Yamaha dealer or a qualified mechanic. Some components require information from the Model's Service Manual for proper installation or adjustment. Be sure to have the Service Manual on hand, if necessary, before proceeding with the installation.

DEALER:

These instructions contain important information for future reference and *must* be given to the customer.

WARRANTY INFORMATION:

- Genuine Yamaha accessories are covered by a 30-day warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. See your Yamaha dealer for a copy of the warranty statement.
- The Limited Warranty provided with new Yamaha vehicles has exclusions for certain failures, including those caused by competition or racing use (except YZ and WR motorcycle models) as well as by abnormal strain or abuse. While installation of these components will not "void" your vehicle's warranty, specific failures adjudged by Yamaha to have resulted from the installation of accessory components or other modifications, or from competition use (except YZ and WR motorcycle models), may not be covered by warranty or Yamaha Extended Service.

PARTS LIST:

This kit contains the following components. Before beginning installation, confirm there are no missing or damaged components.

Item	Part Number	Description	Qty
--	1S3-F16G0-V0	Black SE Foot Well Kit	--
①	*	Foot Well (Right)	1
②	*	Foot Well (Left)	1
③	*	Flange Head Bolt (M8 x 1.25p x 20mm)	4
④	*	Flat Head Screw (M8 x 1.25p x 20mm)	2
⑤	*	Washer (M8)	4
⑥	*	Nyloc Nut (M8)	4

* Part supplied with kit only and not available separately.


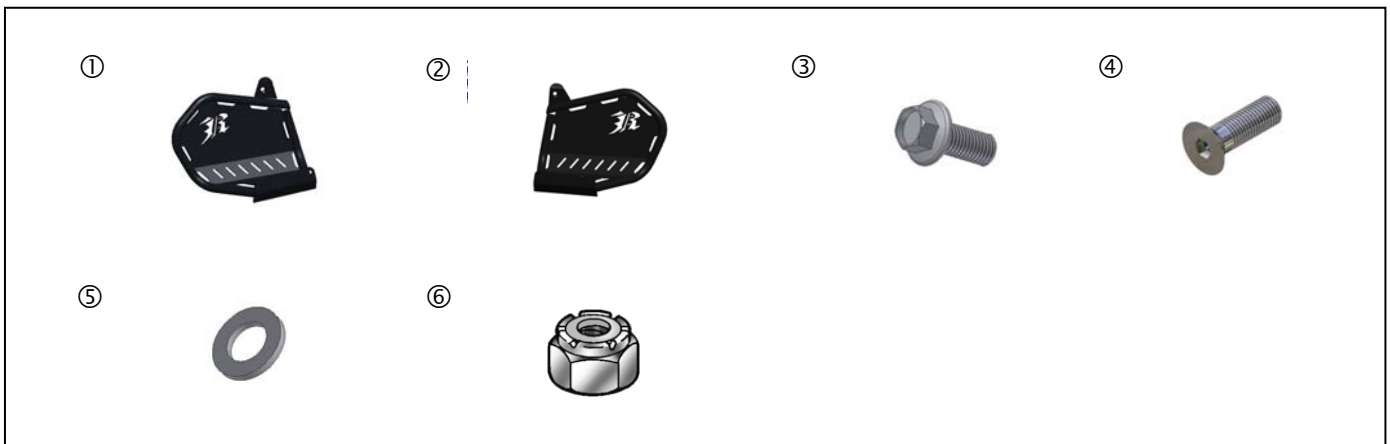


Fig. 1

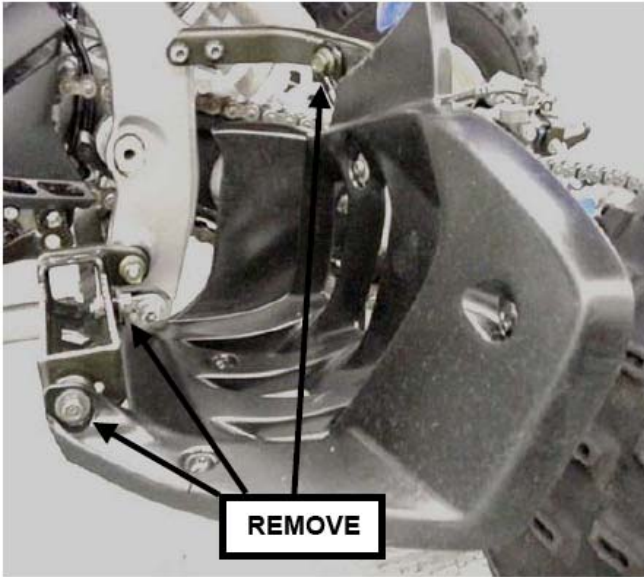

PREPARATION:

1. Place ATV on a secure level surface and set the parking brake.
2. Clean all mounting surfaces before beginning installation.
3. Remove the stock left and right foot wells (Fig. 1) (Refer to Service Manual).

INSTALLATION:

NOTE: _____



Apply Loctite® 242 to all fasteners
Part # ACC-24221-TL-00

1. Install the right foot well ① to the foot rest using the two flange head bolts ③, two washers ⑤ and two Nyloc nuts ⑥. Do not tighten the hardware at this time.
2. Install the right foot well ① to the fender stay using the flat head screw ④.
3. Check for proper alignment of the right foot well and torque all bolts to 25 Nm (18 ft • lb).
4. Repeat the steps above to install the left foot well ②.

MAINTENANCE:

Periodically, check all hardware for looseness and re-torque as required.

CARE AND CLEANING:

Wash using a mild soap and water solution and a soft cloth.

CUSTOMER SERVICE:

For further information, see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.4 HRS

Fig. 2

