

INSTALLATION INSTRUCTIONS

DESCRIPTION: Trunk Mount Kit
 PART # BD5-F84X0-V0
 MODEL: '19~ Niken



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

NOTICE:

This installation requires a torque wrench

WARRANTY INFORMATION:


In the United States, see your Yamaha dealer for a copy of the Yamaha Genuine Parts and Accessories Limited Warranty Statement.

DEALER OR INSTALLER:

These instructions contain important information for future reference and *must* be given to the customer.


Note: This kit requires the Passenger Grab Bar Kit (p/n BD5-F47J0-V0) if the kit is going to be mounted to a Standard. The Passenger Grab Bar is included on the Niken GT.

PARTS LIST:

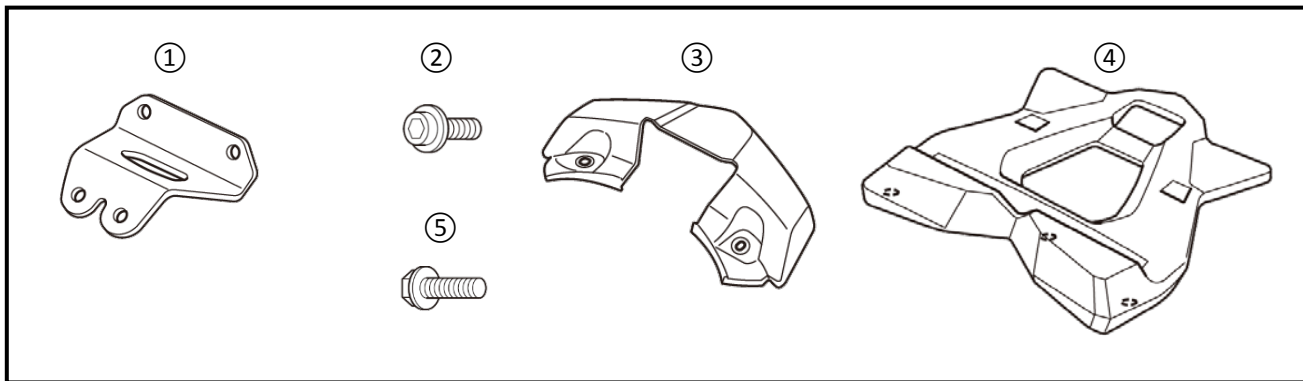

No.	Part Number	Description	Qty
--	BD5-F84X0-V0	Trunk Mount Kit	--
①	*	Grab Bar Support	1
②	*	M6x14mm Socket Head Bolt	4
③	*	Tail Light Bezel	1
④	*	Trunk Mount Plate	1
⑤	*	M8x25mm Hex Head Bolt	3

* Part supplied with kit only and not available separately.

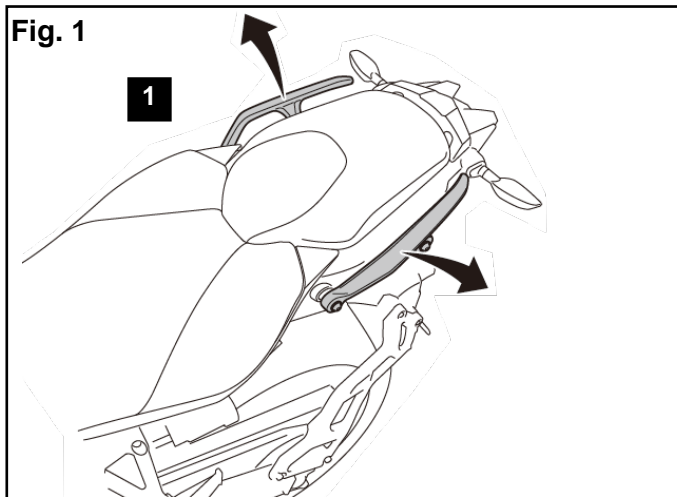


PREPARATION:

- Stand motorcycle on a secure and level surface.
- Clean all mounting surfaces before beginning installation.

INSTALLATION:

- 1** Remove the passenger grab handles as shown in Fig. 1. Retain the bolts and washers for reuse. The grab handles are not reused.

Fig. 2

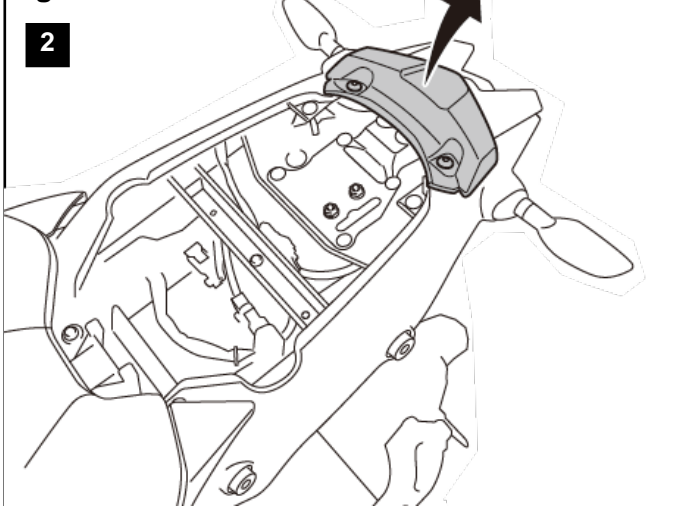


2 Remove the passenger seat and the stock rear light cover as shown in Fig. 2. Retain the screws and washers for reuse. The rear light cover is not reused.

3 The Passenger Grab Bar Kit (p/n **BD5-F47J0-V0**) is required if the kit is going to be mounted to a Niken other than the GT model.

Note: If the Niken is a 'GT' model, the passenger grab bar is included. Remove the grab bar and retain all hardware for reuse.

Install the ① Grab Bar Support to the passenger grab bar. Use two ② M6x14mm socket head bolts and torque to 14Nm as shown in Fig. 3.

Fig. 3

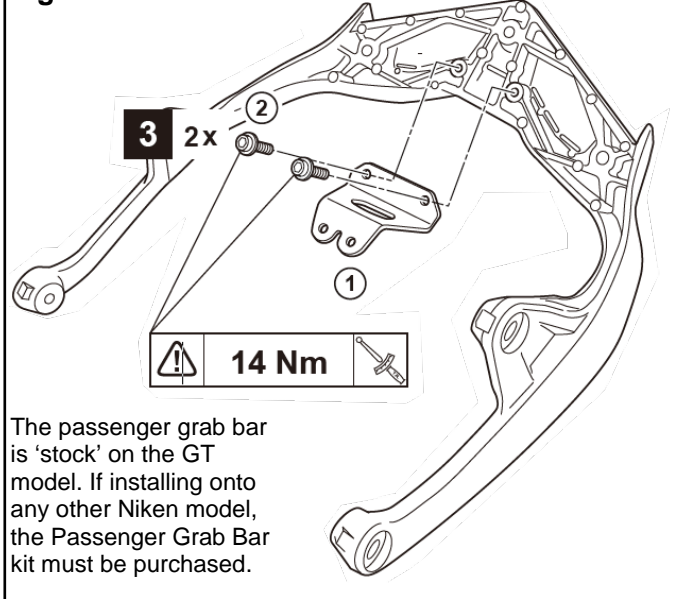

4 Use four stock mount bolts with stock washers (from step 1) to install the passenger grab bar to the frame as shown in Fig. 4. Torque bolts to 25Nm (10.3 ft-lbf).

5 Install two ② M6x14mm socket head bolts to secure the ① Grab Bar Support to the rear subframe as shown in Fig. 4. Torque bolts to 14Nm (10.3 ft-lbf)

Fig. 4


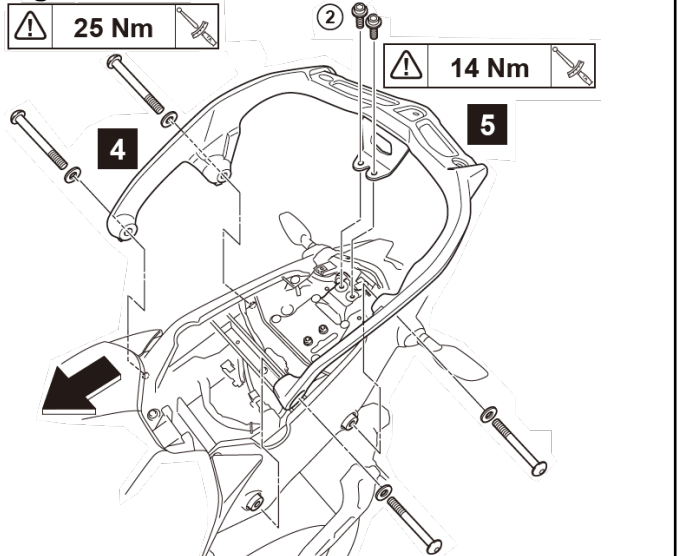


Fig. 5

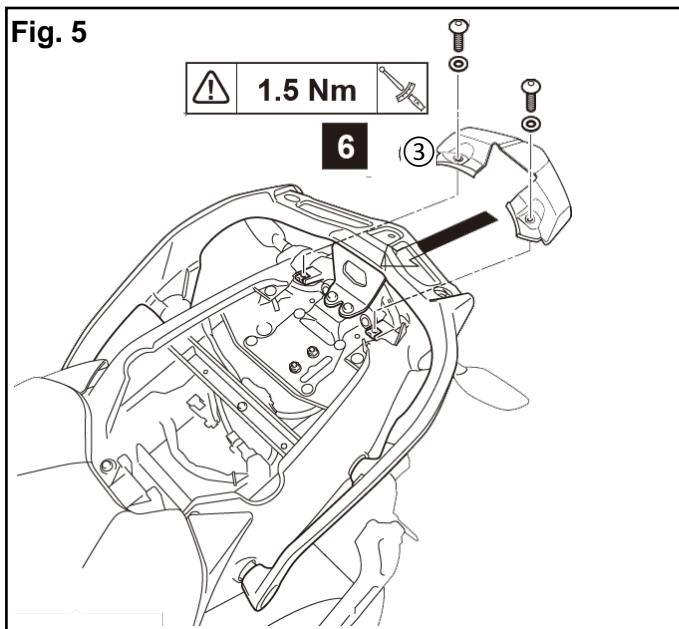

6 Install the ③ Tail Light Bezel as shown in Fig. 5. Torque the bolts to 1.5Nm (1.1ft-lbf; 13.3in.-lb).

7 Install the ④ Trunk Mount Plate to the passenger grab bar (p/n) with three ⑤ M8x25mm hex head bolts and torque to 23Nm (17.0 ft-lbf) as shown in Fig. 6.

MAINTENANCE:

Periodically check the tightness of all hardware and retighten as necessary.

CARE AND CLEANING:

Wash using a mild soap and water solution and soft cloth.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.2 HRS

Fig. 6

