

INSTALLATION INSTRUCTIONS

DESCRIPTION: Tank Pad Kit
PART NUMBER: B67-F41D0-V0
MODEL: '18~ MT-10



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

NOTICES:

The adhesive on the tank pad requires 1 hour to cure 75 % and 72 hours to cure completely. Operating the vehicle before the adhesive has fully cured may cause the pads to peel or slip out of place.

WARRANTY INFORMATION:

In the United States, see your Yamaha dealer for a copy of the Genuine Yamaha Accessories Limited Warranty Statement.

DEALER OR INSTALLER:

These instructions contain important information for future reference and *must* be given to the customer.

PARTS LIST:

No.	Part Number	Description	Qty
--	B67-F41D0-V0	Tank Pad Kit	--
①	*	Rear Center Pad	1

* Part supplied with kit only and not available separately.

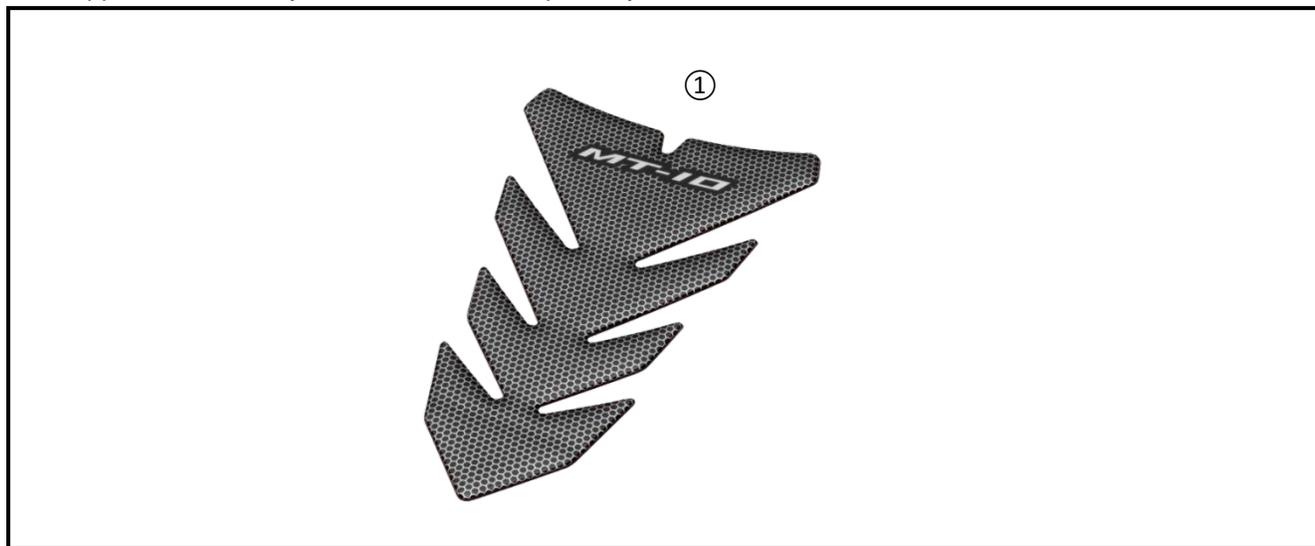


Fig. 1








PREPARATION:

- Stand motorcycle on a secure and level surface.
- Clean all mounting surfaces before beginning installation, taking care to ensure all oil and dirt is removed from tank area.

INSTALLATION:

1. Follow the sequence of steps shown in Fig.1 through Fig. 6.

Note: The adhesive on the tank pad requires 1 hour to cure 75 % and 72 hours to cure completely. Operating the vehicle before the adhesive has fully cured may cause the pads to peel or slip out of place.

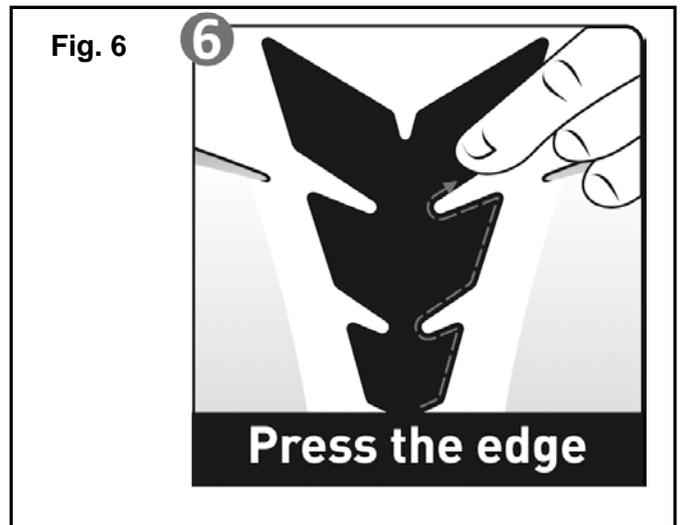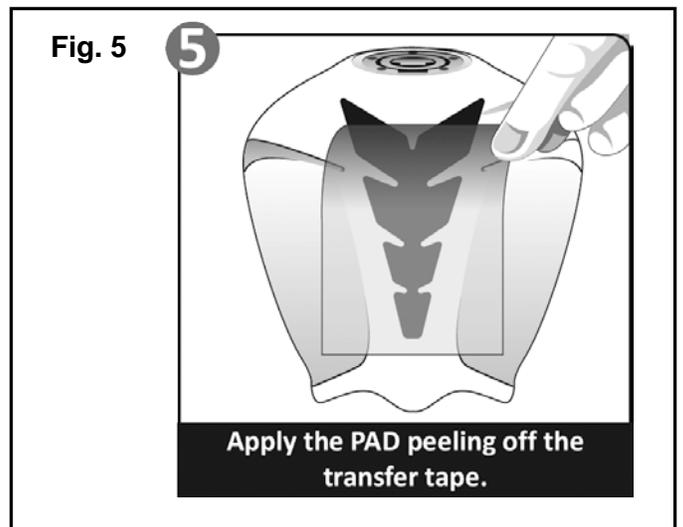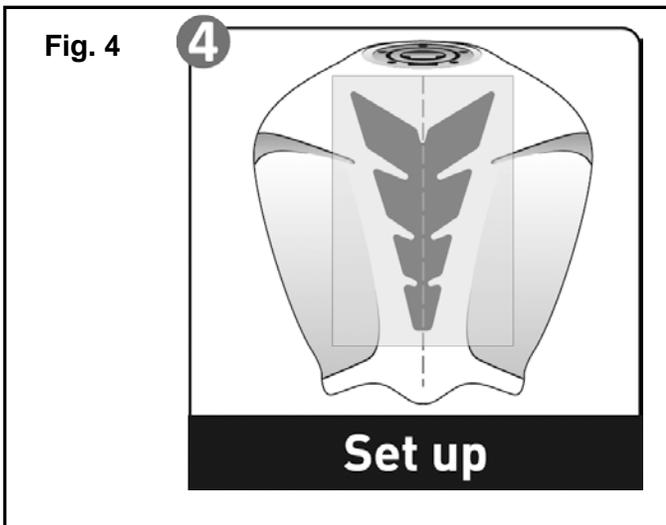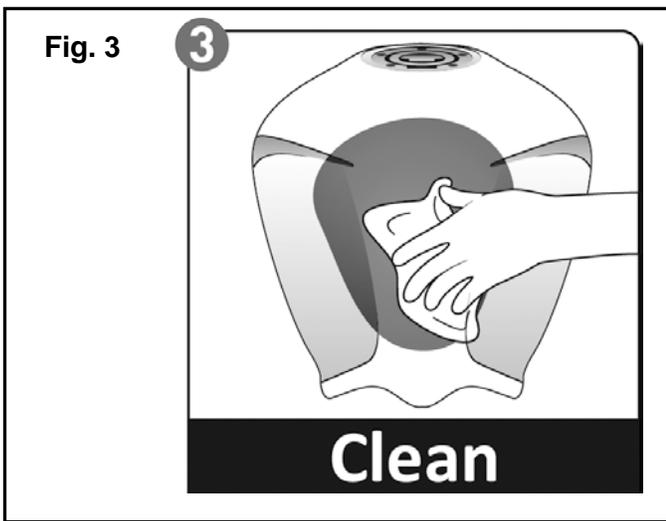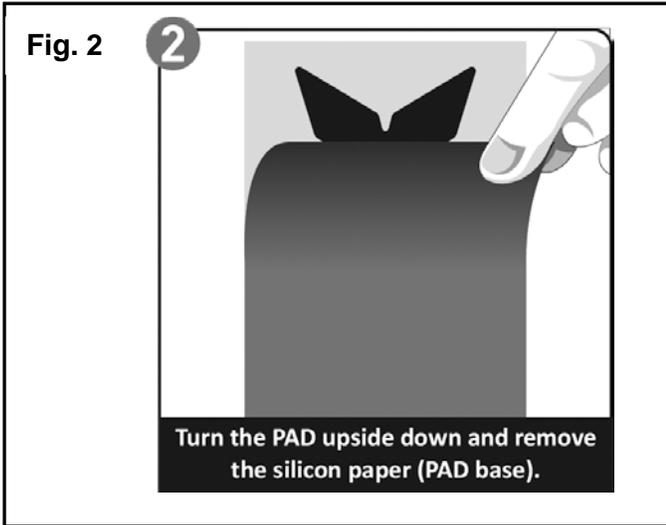

CARE AND CLEANING:

Clean with a clean soft cloth and mild soap and water solution.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.1 HRS