

INSTALLATION INSTRUCTIONS

DESCRIPTION: Rear Speaker Pod Kit
 PART NUMBER: B5H-H81D0-V0
 MODEL: '19~ YXZ1000R



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

NOTICES:

This installation requires a torque wrench and should be performed by an authorized Yamaha dealer or other qualified technician.

WARRANTY INFORMATION:

In the United States, see your Yamaha dealer for a copy of the Genuine Yamaha Accessories Limited Warranty statement.

DEALER OR INSTALLER:

These instructions contain important information for future reference and *must* be given to the customer.


COMPONENTS NOT INCLUDED IN THIS KIT:





Required: Audio System p/n B5H-H81C0-V0; **Recommended:** 2nd Battery Kit p/n B5H-H21B0-V0; **Optional:** Powered Subwoofer p/n B5H-H81D0-T0

PARTS LIST: * Part supplied with kit only and not available separately

No.	Part Number	Rear Speaker Parts List	Qty
--	B5H-H81D0-V0	Rear Speaker Pod Kit	--
①	*	Speaker Enclosure	2
②	*	Clamp Base	2
③	*	Clamp	4
④	*	Rear Speaker Harness	1
⑤	*	M6x16mm Hex Head Flange Bolt	4
⑥	*	M6 Washer	4
⑦	*	M6x45mm Socket Head Bolt	4
⑧	*	M6 Washer	4
⑨	*	Set Screw	4
⑩	*	Cable Tie	10

Parts List Images

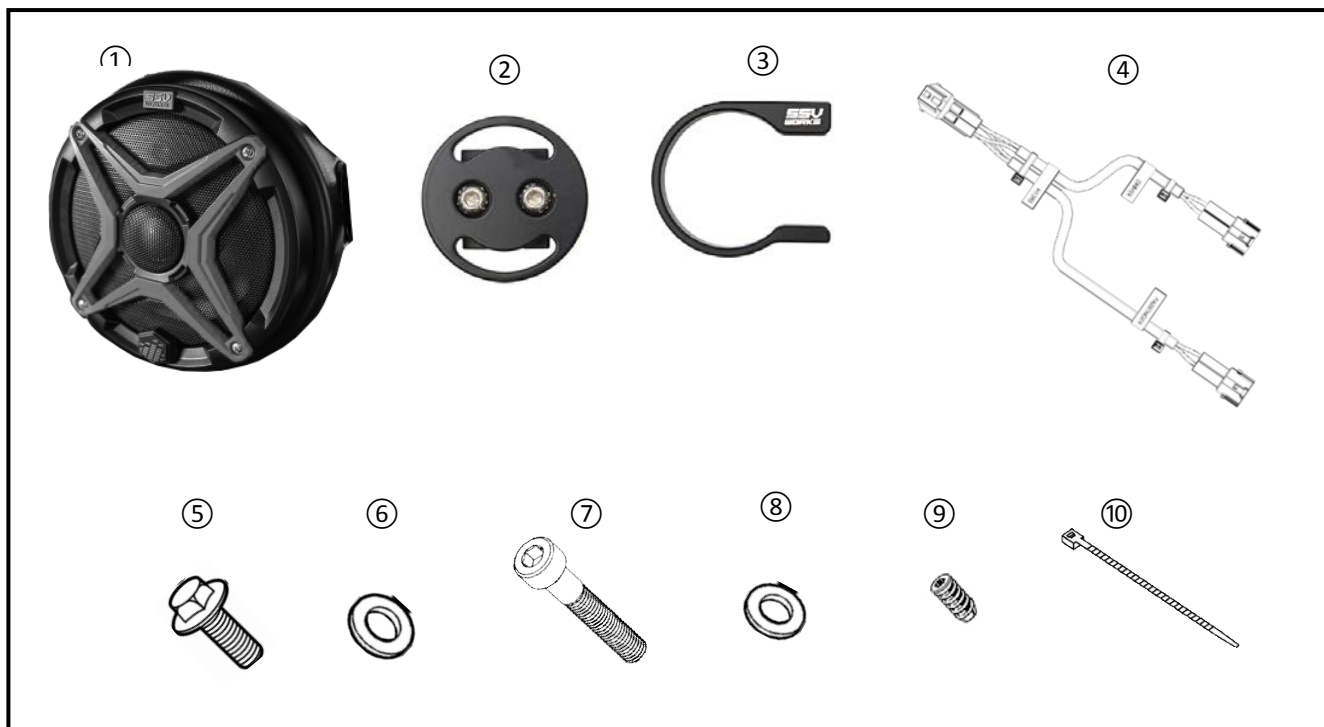

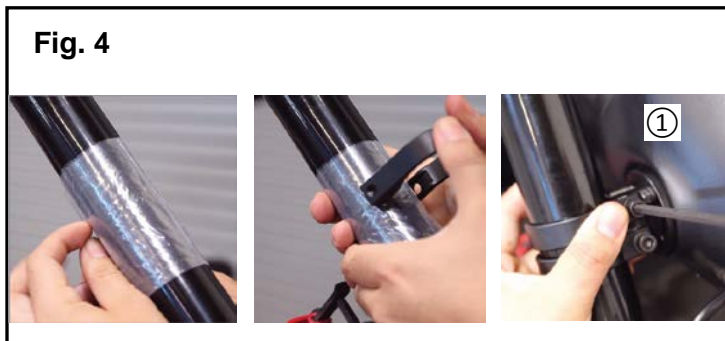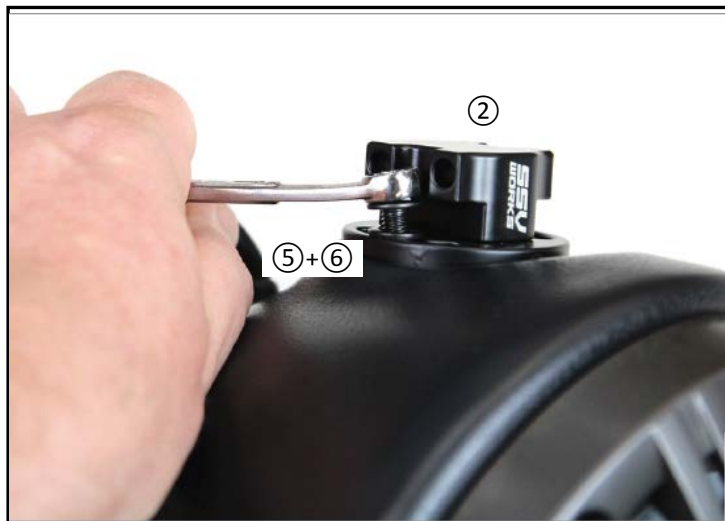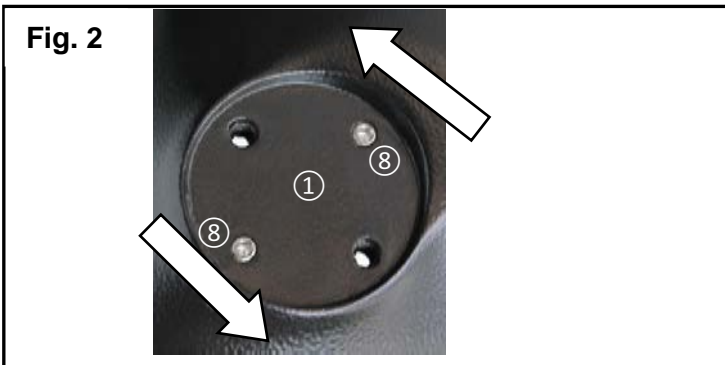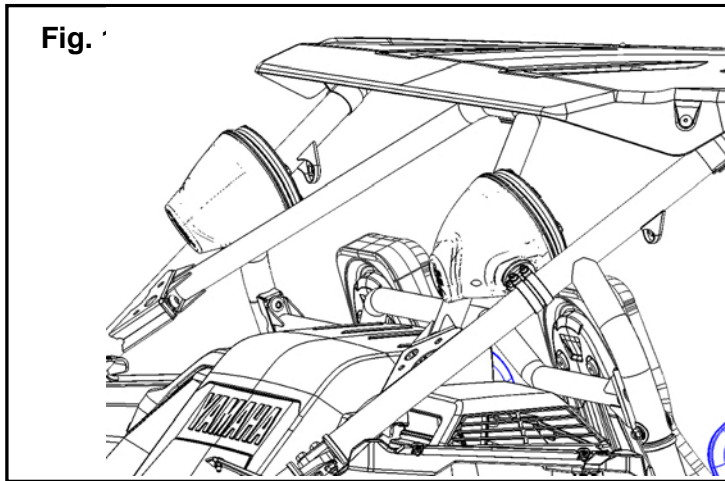

PREPARATION:


- Park the vehicle on a secure and level surface.
- Clean all mounting surfaces before beginning installation.
- Wrap the bag that the four clamps come in around the ROPS tubes, at the two installation points, before installation to prevent scratching.

INSTALLATION:

1. Find the best orientation for the speaker on your Rear ROPS bars as shown in Fig. 1.
2. Screw in the Set Screws in the holes OPPOSITE of the holes used for the ③ Clamp in the ① Speaker Enclosures. See Fig. 2.
3. Loosely install two ② Clamp Bases to the Speaker Enclosure with two ⑤ M6 hex head bolts and two ⑥ Washers. Place the Speaker Enclosure in the desired mounting location on the vehicle. Position the Clamp Base where desired and tighten the two bolts with an 8mm open wrench. See Fig. 3.
4. Place both ③ Clamps on the ROPS tube. Use the plastic bag to prevent scratching (see Fig. 4). Place the Speaker in the final mount location and secure to the clamps with two ⑦ M6 hex socket head bolts and ⑧ Washers with a 5mm hex wrench. See Fig. 5.
5. Connect the ④ Rear Speaker Harness to the rear speakers by pressing the plugs into the receivers on the short cables that drop down from the speakers (see Fig.5).
6. Route the Rear Speaker Harness up along the ROPS enclosure, along the top, and down the passenger side reinforcement tube – as shown in Fig. 6 and 7. Secure the harness with Cable Ties.
7. Connect the Rear Speaker Harness to the Main Speaker Harness from the Audio Kit. The connection point is roughly where the ☆ is in Fig. 6 and 7.

Speaker Polarity

For proper sound, ensure the speaker polarity is correct connect the “+” to the “+” and the “-“to the “-“from the speaker wire to the amplifier.

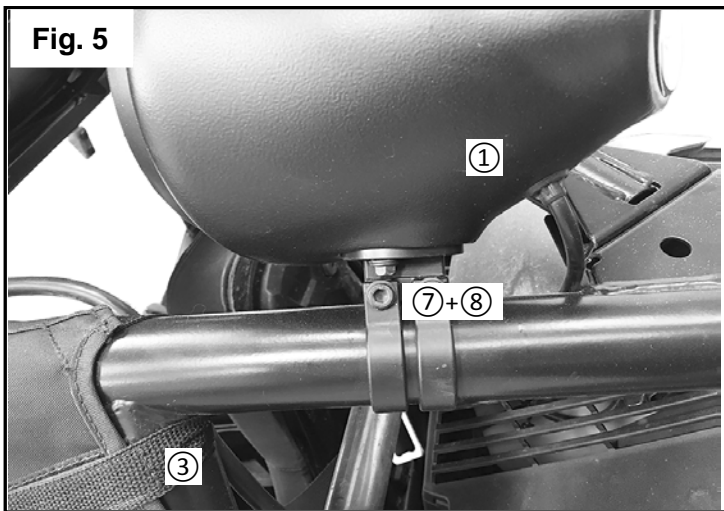

MAINTENANCE:

Periodically, check torque on all hardware. If loose hardware is found, re-torque to specification.

CARE AND CLEANING:

Clean plastic parts with a clean soft cloth and mild soap and water. Rinse and dry. Clean speaker exteriors with a clean soft cloth and mild soap and water solution.

CUSTOMER SERVICE:

For further information see your dealer.

ESTIMATED TIME TO INSTALL: 1.5 HRS

