



INSTALLATION INSTRUCTIONS
Standard Backrest Pad
STR-5C740-00-00
2008 XV19CU

**WARNING**

Please read and understand these instructions completely before installation to avoid possible injury to yourself, or damage to the accessory or vehicle.

CAUTION:

- This installation should be performed by an authorized Star dealer or a qualified mechanic. Some components require information from the model's service manual for proper installation or adjustment. Be sure to have the service manual on hand, if necessary, before proceeding with the installation.
- Alteration of emission-related components constitutes tampering under Federal and State laws and can lead to substantial fines and penalties if used other than in closed-course competition.
- Engine-related competition parts are intended for closed-course racing applications only.

DEALER:

These instructions contain important information for future reference and *must* be given to the customer.

WARRANTY INFORMATION:

- Genuine Star Accessories are covered by a 90-day warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. See your Yamaha dealer for a copy of the warranty statement.
- The Limited Warranty provided with new Star vehicles has exclusions for certain failures, including those caused by competition or racing use as well as by abnormal strain or abuse. While installation of these components will not "void" your vehicle's warranty, specific failures adjudged by Yamaha to have resulted from the installation of accessory components or other modifications, or from competition use, may not be covered by warranty or Yamaha Extended Service for Star motorcycles.

1. PARTS LIST:

This kit contains the following components. Before beginning installation confirm there are no missing or damaged components.

Item #	Part Number	Description	Qty
1	STR-5C740-00-00	Standard Backrest Pad	1
2	*	Hex Bolt (M6 x 1.0 x 35mm)	3
3	*	Plain washer (M6)	3

* Part supplied with kit only and not available separately.

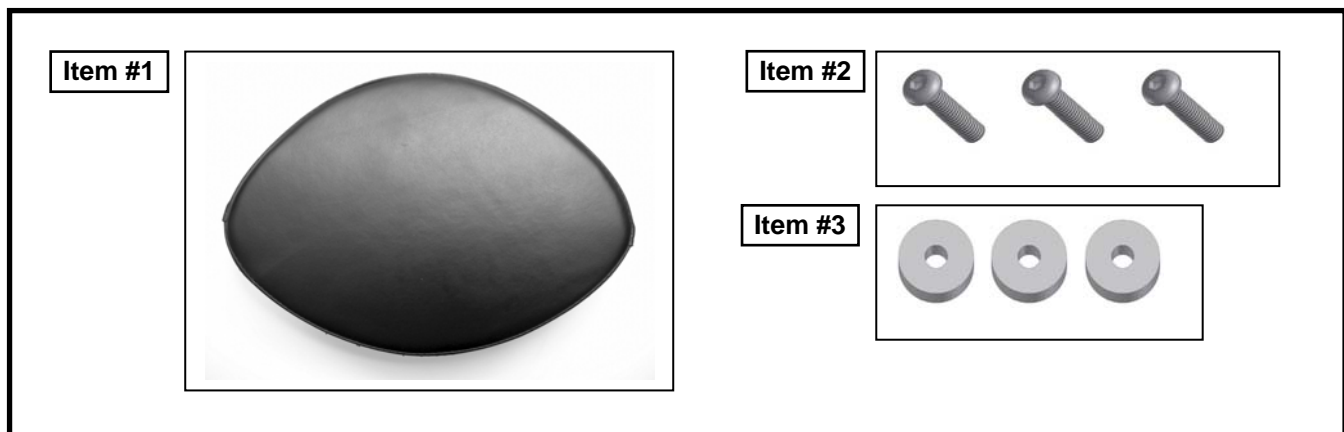


Fig. 1



2. PREPARATION:

- Place motorcycle on a secure level surface and set the parking brake.
- Clean all mounting surfaces before beginning installation.

3. INSTALLATION:

NOTE:

Use Loctite® 242 Threadlocker on each fastener to prevent loosening while riding.

- Install custom backrest pad using the M6 bolts and washers provided. (Fig. 1)
Torque bolts to 6 Nm (4.3 ft • lb)

4. MAINTENANCE:

Periodically check torque on all hardware. If loose hardware is found, remove hardware, clean off old Loctite®, re-apply fresh Loctite® and re-torque to specification.

5. CARE AND CLEANING:

Wash using a mild soap and water solution and soft cloth.

6. CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.1 HRS